



BODYSTEEL & SILVER CO.,LTD
63 Moo 5, Soi Wat Bang-Co Yaek Rong-Foam, Kanchanaphisek Road
Bang Ma-Nang, Bang Yai, NONTHABURI 11140 THAILAND

☎ 66 2-1505999 📠 66-2-1505990

sales@steelandsilver.com

EO STERILIZATION Quality Control Report

Date : 25-Oct-2024

LOT : 01003

STERILIZATION DATE : 12-Oct-2024

EXPIRE DATE : 12-Oct-2029

QC REPORT :

PASS as the test result has been shown as pictures below.

BIOLOGICAL INDICATORS :

The EZTest indicator is placed in a suitable test pack which is representative of the load. The load is then processed as usual.

After sterilization the chemical indicator ring on the label changes from blue to brownish when exposed to Ethylene Oxide (EO gas). This distinguishes exposed from unexposed units (it does not indicate acceptable sterilization).

After the incubation period of 48 hours, the appearance of a yellow color indicates bacterial growth. No color change indicates adequate sterilization.

Result
PASS



Sample Fail



Yellow


Sample New Indicator



Pink

Quality Assurance By:

Date: 25-Oct-2024

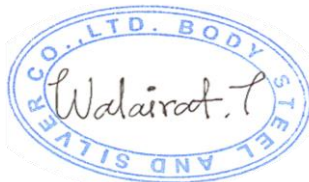

Lot 1003				Sterilization Log			
No time use secondary action equ				Ethylene oxide Sterilizer			
Ster T: 50 °C				Ster H: 55 %			
Clean time: 8h min				Clean time: 9 p.c.			
Clean P: 0 kPa				Clean P: 0 kPa			
Clean time: 15 min				Clean time: 15 min			
T	°C	P	kPa	H	%	Time	
Start:	23.1	-0.4	96.9	15:50			
Water:	23.2	-0.4	74.7	15:50			
Vacuum:	23.2	-5.0	74.1	15:51			
Phat:	35.0	-2.0	74.4	16:08			
Kilat:	35.0	-1.0	74.6	16:18			
Vacuum:	34.1	-6.1	74.7	16:24			
Keep:	40.0	-5.2	74.9	16:32			
Info:	33.7	-5.0	74.7	16:35			
Vacuum:	39.8	-6.1	74.2	16:40			
Humid:	39.8	-6.1	74.2	16:40			
Kilat:	30.0	-5.1	74.6	17:10			
Cost:	37.6	-49.4	74.2	17:19			
Diffu:	39.0	-23.6	74.4	17:29			
Heat:	50.1	-10.4	74.5	18:07			
Steril:	50.0	-10.4	74.6	18:07			
Steril:	50.0	-7.1	74.6	18:17			
Steril:	50.0	-9.9	74.8	18:27			
Steril:	50.4	-1.6	74.4	18:37			
Steril:	50.0	-1.0	74.6	18:47			
Steril:	50.3	-0.5	74.6	18:57			
Steril:	50.3	-0.2	74.8	19:07			
Steril:	50.1	-0.1	74.6	19:17			
Steril:	50.3	-0.1	74.2	19:27			
Steril:	50.2	-0.1	74.4	19:37			
Steril:	50.3	-0.1	74.3	19:47			
Steril:	50.0	-0.1	74.1	20:07			
Steril:	50.3	-0.2	74.5	20:17			
Steril:	50.3	-0.2	74.6	20:27			
Steril:	50.1	-0.2	74.7	20:37			
Steril:	50.3	-0.3	74.4	20:47			
Steril:	50.1	-0.3	74.6	20:57			
Steril:	50.3	-0.3	74.4	21:07			
Steril:	50.3	-0.3	74.8	21:17			
Steril:	50.1	-0.4	74.4	21:27			
Steril:	50.2	-0.4	74.4	21:37			
Steril:	50.2	-0.4	74.6	21:47			
Steril:	50.3	-0.4	74.6	21:57			
Steril:	50.1	-0.4	74.6	22:07			
Steril:	50.1	-0.5	74.3	22:17			
Steril:	50.1	-0.5	74.6	22:27			
Steril:	50.3	-0.5	74.6	22:37			
Steril:	50.3	-0.5	74.8	22:47			
Steril:	50.3	-0.5	74.0	23:07			
Steril:	50.3	-0.5	74.6	23:17			
Steril:	50.0	-0.6	74.2	23:27			
Steril:	50.3	-0.6	74.0	23:37			
Steril:	50.2	-0.6	74.2	23:47			
Steril:	49.8	-0.6	74.2	23:57			
Clean Process:	18.1		74.6	00:33			
Info:	50.7	-17.6	74.6	01:00			
Info:	50.7	-17.6	74.6	01:00			
Info:	50.4	-17.9	74.7	01:27			
Info:	50.3	-17.9	74.5	01:53			
Info:	50.3	-18.0	74.6	02:20			
Info:	50.4	-17.9	74.7	02:47			
Info:	50.4	-18.0	74.6	03:14			
Info:	50.3	-18.0	74.5	03:41			
Info:	50.4	-17.7	74.6	04:08			
Info:	50.4	-17.7	74.6	04:30			
Info:	50.4	-17.7	74.6	04:50			
Sterilization Completed				Sterilization Log			
Sterilization Time: 00:00				Sterilization Time: 00:00			
Sterilization Date: 2024-10-12				Sterilization Date: 2024-10-12			
Sterilization Operator: 5500000000				Sterilization Operator: 5500000000			

Protocol: