

BODYSTEEL & SILVER CO.,LTD

63 Moo 5, Soi Wat Bang-Co Yaek Rong-Foam, Kanchanaphisek Road
Bang Ma-Nang, Bang Yai, NONTABURI 11140 THAILAND

 66 2-1505999 66-2-1505990

sales@steelandsilver.com

EO STERILIZATION

Quality Control Report

Date : 15-DEC-2023

LOT : 914

STERILIZATION DATE : 9-DEC-2023

EXPIRE DATE : 9-DEC-2028

QC REPORT :

PASS as the test result has been shown as pictures below.

BIOLOGICAL INDICATORS :

The EZTest indicator is placed in a suitable test pack which is representative of the load. The load is then processed as usual.

After sterilization the chemical indicator ring on the label changes from blue to brownish when exposed to Ethylene Oxide (EO gas). This distinguishes exposed from unexposed units (it does not indicate acceptable sterilization).

After the incubation period of 48 hours, the appearance of a yellow color indicates bacterial growth. No color change indicates adequate sterilization.

Result
PASS



Sample Fail



Yellow


Sample New
Indicator



Pink

Quality Assurance By:

Date: 15-DEC-2023

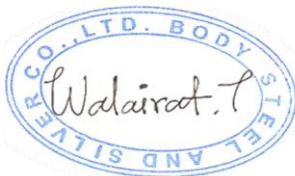

LOT NO 914

Welcome use sanquing medical equ
Ethylene oxide sterilize
50 °C
Ster T: 55 X
Ster H: 50 min
Ster Time: 50 min
Clean time: 5 min
Clean P: -50 kPa
Clean time: 15 min

T	t	P kPa	H %	time
Start:	23.3	-0.3		91.5 18:30
Water:	23.4	-0.2		74.7 18:30
Nature:	23.4	-0.3		74.8 18:31
Phret:	35.0	-3.2		74.0 18:46
Kheat:	35.2	-2.3		74.2 18:46
Vacu:	34.3	-3.0		62.4 19:01
kepp:	40.4	-59.1		74.8 19:09
Inta:	40.1	-4.9		62.1 19:12
Vacu:	39.2	-60.1		93.8 19:18
Humid:	39.2	-60.1		59.8 19:18
KHum:	38.2	-58.2		69.0 19:48
Dost:	37.8	-58.1		60.8 19:56
Rosi:	37.8	-49.5		63.3 19:56
Diffu:	37.6	-24.5		64.8 20:05
Heat:	50.1	-16.5		75.0 20:37
Steri:	50.6	-16.5		74.9 20:47
Steri:	50.6	-14.0		74.3 20:47
Steri:	50.4	-11.4		74.7 20:57
Steri:	50.2	-9.8		74.9 21:07
Steri:	50.4	-9.2		74.5 21:17
Steri:	50.4	-8.2		74.7 21:37
Steri:	50.4	-7.3		74.7 21:47
Steri:	50.4	-6.8		74.5 21:57
Steri:	50.3	-6.4		74.1 22:07
Steri:	50.4	-6.4		74.7 22:17
Steri:	50.1	-5.9		74.9 22:27
Steri:	50.1	-5.5		74.9 22:37
Steri:	50.3	-5.0		74.7 22:47
Steri:	50.2	-4.5		74.9 22:57
Steri:	50.1	-3.9		74.5 23:07
Steri:	50.2	-3.3		74.5 23:17
Steri:	50.2	-2.8		74.5 23:27
Steri:	50.0	-2.3		74.9 23:37
Steri:	50.3	-1.9		74.9 23:47
Steri:	50.3	-1.5		74.1 23:57
Steri:	50.1	-1.2		74.5 00:07
Steri:	50.3	-1.0		74.1 00:17
Steri:	50.2	-0.8		74.3 00:27
Steri:	50.2	-0.6		74.7 00:37
Steri:	50.4	-0.5		74.7 00:47
Steri:	50.3	-0.5		74.3 00:57
Steri:	50.1	-0.4		74.7 01:07
Steri:	50.4	-0.4		74.3 01:17
Steri:	50.3	-0.3		74.3 01:27
Steri:	50.2	-0.3		74.1 01:37
Steri:	50.1	-0.3		74.5 01:47
Steri:	50.4	-0.3		74.5 02:07
Steri:	50.3	-0.3		74.3 02:17
Steri:	50.0	-0.3		74.3 02:27
Steri:	50.0	-0.3		74.8 02:37

Clean Process

1th:	50.8	-16.7		54.2 03:10
2th:	50.7	-16.3		49.6 03:41
3th:	50.6	-16.1		47.7 04:13
4th:	50.6	-16.3		46.7 04:44
5th:	50.8	-9.8		43.6 05:10
Inta:	50.8	-9.8		43.6 05:16
End:	50.8	-9.5		44.0 05:16

Sterilization Completed
Steril Time: 10H45min

Usecode: 000104

Batch No: 2008-12-9

Operator: 50003450051

Protocol: