



BODYSTEEL & SILVER CO.,LTD

63 Moo 5, Soi Wat Bang-Co Yaek Rong-Foam, Kanchanaphisek Road
Bang Ma-Nang, Bang Yai, NONTABURI 11140 THAILAND

☎ 66 2-1505999 📠 66-2-1505990

sales@steelsilver.com

EO STERILIZATION Quality Control Report

Date : 25-JAN-2024

LOT : 919

STERILIZATION DATE : 10-JAN-2024

EXPIRE DATE : 10-JAN-2029

QC REPORT :

PASS as the test result has been shown as pictures below.

BIOLOGICAL INDICATORS :

The EZTest indicator is placed in a suitable test pack which is representative of the load. The load is then processed as usual.

After sterilization the chemical indicator ring on the label changes from blue to brownish when exposed to Ethylene Oxide (EO gas). This distinguishes exposed from unexposed units (it does not indicate acceptable sterilization).

After the incubation period of 48 hours, the appearance of a yellow color indicates bacterial growth. No color change indicates adequate sterilization.

Result
PASS



Sample Fail



Yellow


Sample New Indicator



Pink

Quality Assurance By:

Date: 25-JAN-2024

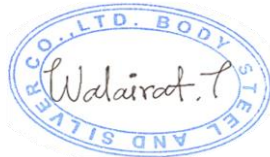

-STERILIZATION LOG- 10/01/2024 16:11				STEP TIME				TEMP(C)				PRESS(KPa)				HUMID(%)															
PV				17:31	45.0	00	87.4	00				00				86.1															
HU				17:44	45.2	-85	77.2	-85				NONE				NONE															
GS				17:54	44.4	-84	80.5	-84				NONE				NONE															
ST				17:56	44.9	-48	NONE	-48				NONE				NONE															
ST				18:26	44.6	-46	NONE	-46				NONE				NONE															
ST				18:56	44.9	-46	NONE	-46				NONE				NONE															
ST				19:26	45.5	-46	NONE	-46				NONE				NONE															
ST				19:56	45.1	-45	NONE	-45				NONE				NONE															
ST				20:26	44.6	-45	NONE	-45				NONE				NONE															
ST				20:56	45.0	-45	NONE	-45				NONE				NONE															
ST				21:26	45.6	-45	NONE	-45				NONE				NONE															
ST				21:56	45.4	-45	NONE	-45				NONE				NONE															
ST				22:26	44.8	-45	NONE	-45				NONE				NONE															
AE				22:56	44.7	-45	NONE	-45				NONE				NONE															
AE				23:55	45.2	-88	NONE	-88				NONE				NONE															
AE				00:57	45.5	-88	NONE	-88				NONE				NONE															
AE				01:58	44.9	-87	NONE	-87				NONE				NONE															
AE				02:58	45.5	-88	NONE	-88				NONE				NONE															
AE				03:59	44.8	-88	NONE	-88				NONE				NONE															
AE				04:59	45.5	-87	NONE	-87				NONE				NONE															
AE				05:59	44.8	-88	NONE	-88				NONE				NONE															
AE				06:59	45.5	-88	NONE	-88				NONE				NONE															
AE				07:59	44.8	-88	NONE	-88				NONE				NONE															
FI				08:56	45.5	-85	NONE	-85				NONE				NONE															
CHK BY :																															
APP BY :																															
RESULT :																															

Protocol: