



BODYSTEEL & SILVER CO.,LTD
63 Moo 5, Soi Wat Bang-Co Yaek Rong-Foam, Kanchanaphisek Road
Bang Ma-Nang, Bang Yai, NONTHABURI 11140 THAILAND

☎ 66 2-1505999 📠 66-2-1505990

sales@steelsilver.com

EO STERILIZATION Quality Control Report

Date : **09-FEB-2024**

LOT : 0924

STERILIZATION DATE : 31-JAN-2024

EXPIRE DATE : 31-JAN-2029

QC REPORT :

PASS as the test result has been shown as pictures below.

BIOLOGICAL INDICATORS :

The EZTest indicator is placed in a suitable test pack which is representative of the load. The load is then processed as usual.

After sterilization the chemical indicator ring on the label changes from blue to brownish when exposed to Ethylene Oxide (EO gas). This distinguishes exposed from unexposed units (it does not indicate acceptable sterilization).

After the incubation period of 48 hours, the appearance of a yellow color indicates bacterial growth. No color change indicates adequate sterilization.

Result
PASS



Sample Fail



Yellow


Sample New
Indicator



Pink

Quality Assurance By:

Date: 09-FEB-2024

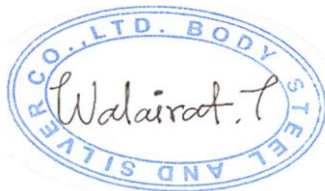

STEP	TIME	TEMP (C)	PRESS (KPa)	WPT (2000)
PH	17:48	27.6	00	87.1
FO	19:29	45.0	00	88.7
HO	19:42	44.6	-65	80.3
OS	19:52	44.8	-84	82.9
ST	19:54	45.8	-51	NONE
ST	20:24	45.3	-51	NONE
ST	20:54	44.6	-52	NONE
ST	21:24	44.8	-51	NONE
ST	21:54	45.5	-51	NONE
ST	22:24	44.8	-51	NONE
ST	22:54	44.7	-51	NONE
ST	23:24	45.5	-51	NONE
ST	23:54	45.0	-51	NONE
ST	00:24	44.6	-51	NONE
HE	00:54	45.4	-51	NONE
HE	01:54	44.7	-88	NONE
HE	02:55	45.7	-88	NONE
HE	03:56	44.8	-88	NONE
HE	04:56	45.6	-88	NONE
HE	05:56	44.8	-88	NONE
HE	06:56	45.7	-88	NONE
HE	07:55	44.7	-88	NONE
HE	08:53	45.5	-88	NONE
HE	09:52	44.7	-87	NONE
HE	10:49	45.6	-87	NONE
FI	10:54	45.2	-40	NONE

Protocol: