



BODYSTEEL & SILVER CO.,LTD

63 Moo 5, Soi Wat Bang-Co Yaek Rong-Foam, Kanchanaphisek Road
Bang Ma-Nang, Bang Yai, NONTABURI 11140 THAILAND

☎ 66 2-1505999 📠 66-2-1505990

sales@steelandsilver.com

EO STERILIZATION Quality Control Report

Date : 23-May-2025

LOT : 1085

STERILIZATION DATE : 14-May-2025

EXPIRE DATE : 14-May-2029

QC REPORT :

PASS as the test result has been shown as pictures below.

BIOLOGICAL INDICATORS :

The EZTest indicator is placed in a suitable test pack which is representative of the load. The load is then processed as usual.

After sterilization the chemical indicator ring on the label changes from blue to brownish when exposed to Ethylene Oxide (EO gas). This distinguishes exposed from unexposed units (it does not indicate acceptable sterilization).

After the incubation period of 48 hours, the appearance of a yellow color indicates bacterial growth. No color change indicates adequate sterilization.

Result
PASS



Sample Fail



Yellow


Sample New Indicator



Pink

Quality Assurance By:

Date: 23-May-2025

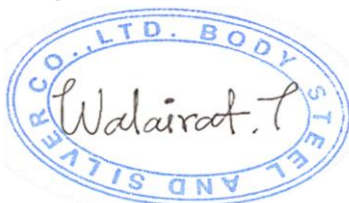

Lot 1086

Medicine use sandiang medical equ
Ethylene oxide sterilize
Ster T: 50 °C
Ster H: 55 %
Ster time: 6h 00m
Clean time: 6 pic
Clean P: 0 kPa
Clean time: 15 min

T °C	P kPa	H %	time
Start: 23.9	-0.6	95.9	09:48
Water: 24.0	-0.5	74.7	09:49
Vacu: 23.9	-5.0	74.1	09:49
Prhet: 35.0	-2.1	74.6	10:08
Heat: 35.2	-1.2	74.4	10:18
Vacu: 34.3	-60.1	74.8	10:23
keep: 39.1	-57.5	74.7	10:31
Inta: 38.2	-4.9	74.3	10:34
Vacu: 38.3	-60.0	74.3	10:40
Humid: 38.3	-60.0	74.3	10:40
KHum: 37.4	-52.5	74.3	11:10
Dosi: 36.5	-58.1	74.7	11:18
Rst: 36.8	-48.9	74.7	11:18
Diffu: 36.2	-23.8	74.2	11:28
Heat: 50.1	-10.3	74.3	12:06
Steri: 50.1	-10.3	74.3	12:06
Steri: 51.6	-7.1	74.1	12:16
Steri: 50.5	-4.2	74.5	12:26
Steri: 50.7	-2.4	74.1	12:36
Steri: 50.3	-1.5	74.3	12:46
Steri: 50.4	-0.9	74.1	12:56
Steri: 50.2	-0.5	74.7	13:06
Steri: 50.1	-0.3	74.3	13:16
Steri: 50.4	-0.1	74.1	13:26
Steri: 50.2	-0.1	74.5	13:36
Steri: 50.1	-0.1	74.5	13:46
Steri: 50.4	-0.1	74.1	14:06
Steri: 50.2	-0.1	74.5	14:16
Steri: 50.1	-0.1	74.5	14:26
Steri: 50.4	-0.1	74.7	14:36
Steri: 50.2	-0.1	74.3	14:46
Steri: 50.1	-0.1	74.1	14:56
Steri: 50.4	-0.1	74.7	15:06
Steri: 50.2	-0.1	74.3	15:16
Steri: 50.1	-0.1	74.1	15:26
Steri: 50.4	-0.1	74.5	15:36
Steri: 50.2	-0.1	74.5	15:46
Steri: 50.1	-0.1	74.3	15:56
Steri: 50.4	-0.1	74.1	16:06
Steri: 50.2	-0.1	74.3	16:16
Steri: 50.1	-0.1	74.1	16:26
Steri: 50.4	-0.1	74.7	16:36
Steri: 50.2	-0.1	74.3	16:46
Steri: 50.1	-0.1	74.1	16:56
Steri: 50.4	-0.1	74.7	17:06
Steri: 50.2	-0.1	74.3	17:16
Steri: 50.1	-0.1	74.1	17:26
Steri: 50.4	-0.1	74.7	17:36
Steri: 50.2	-0.1	74.1	17:46
Steri: 50.1	-0.1	74.7	17:56
Steri: 50.4	-0.1	74.3	18:06
Steri: 50.2	-0.1	74.0	18:16
Clean Process			
1th: 50.6	-14.6	74.7	18:22
2th: 50.8	-14.5	74.4	18:39
3th: 50.7	-14.5	74.1	18:45
4th: 50.6	-14.4	74.5	18:52
5th: 50.4	-14.4	74.6	19:18
6th: 50.5	-14.6	74.1	20:45
Inta: 50.5	-8.0	74.7	20:45
End: 50.5	-8.0	74.7	20:45

Sterilization Completed
Steril Time: 10h56min
Usecount: 00187
Date: 2025-5-14
Number: 50000450051
Operator: